


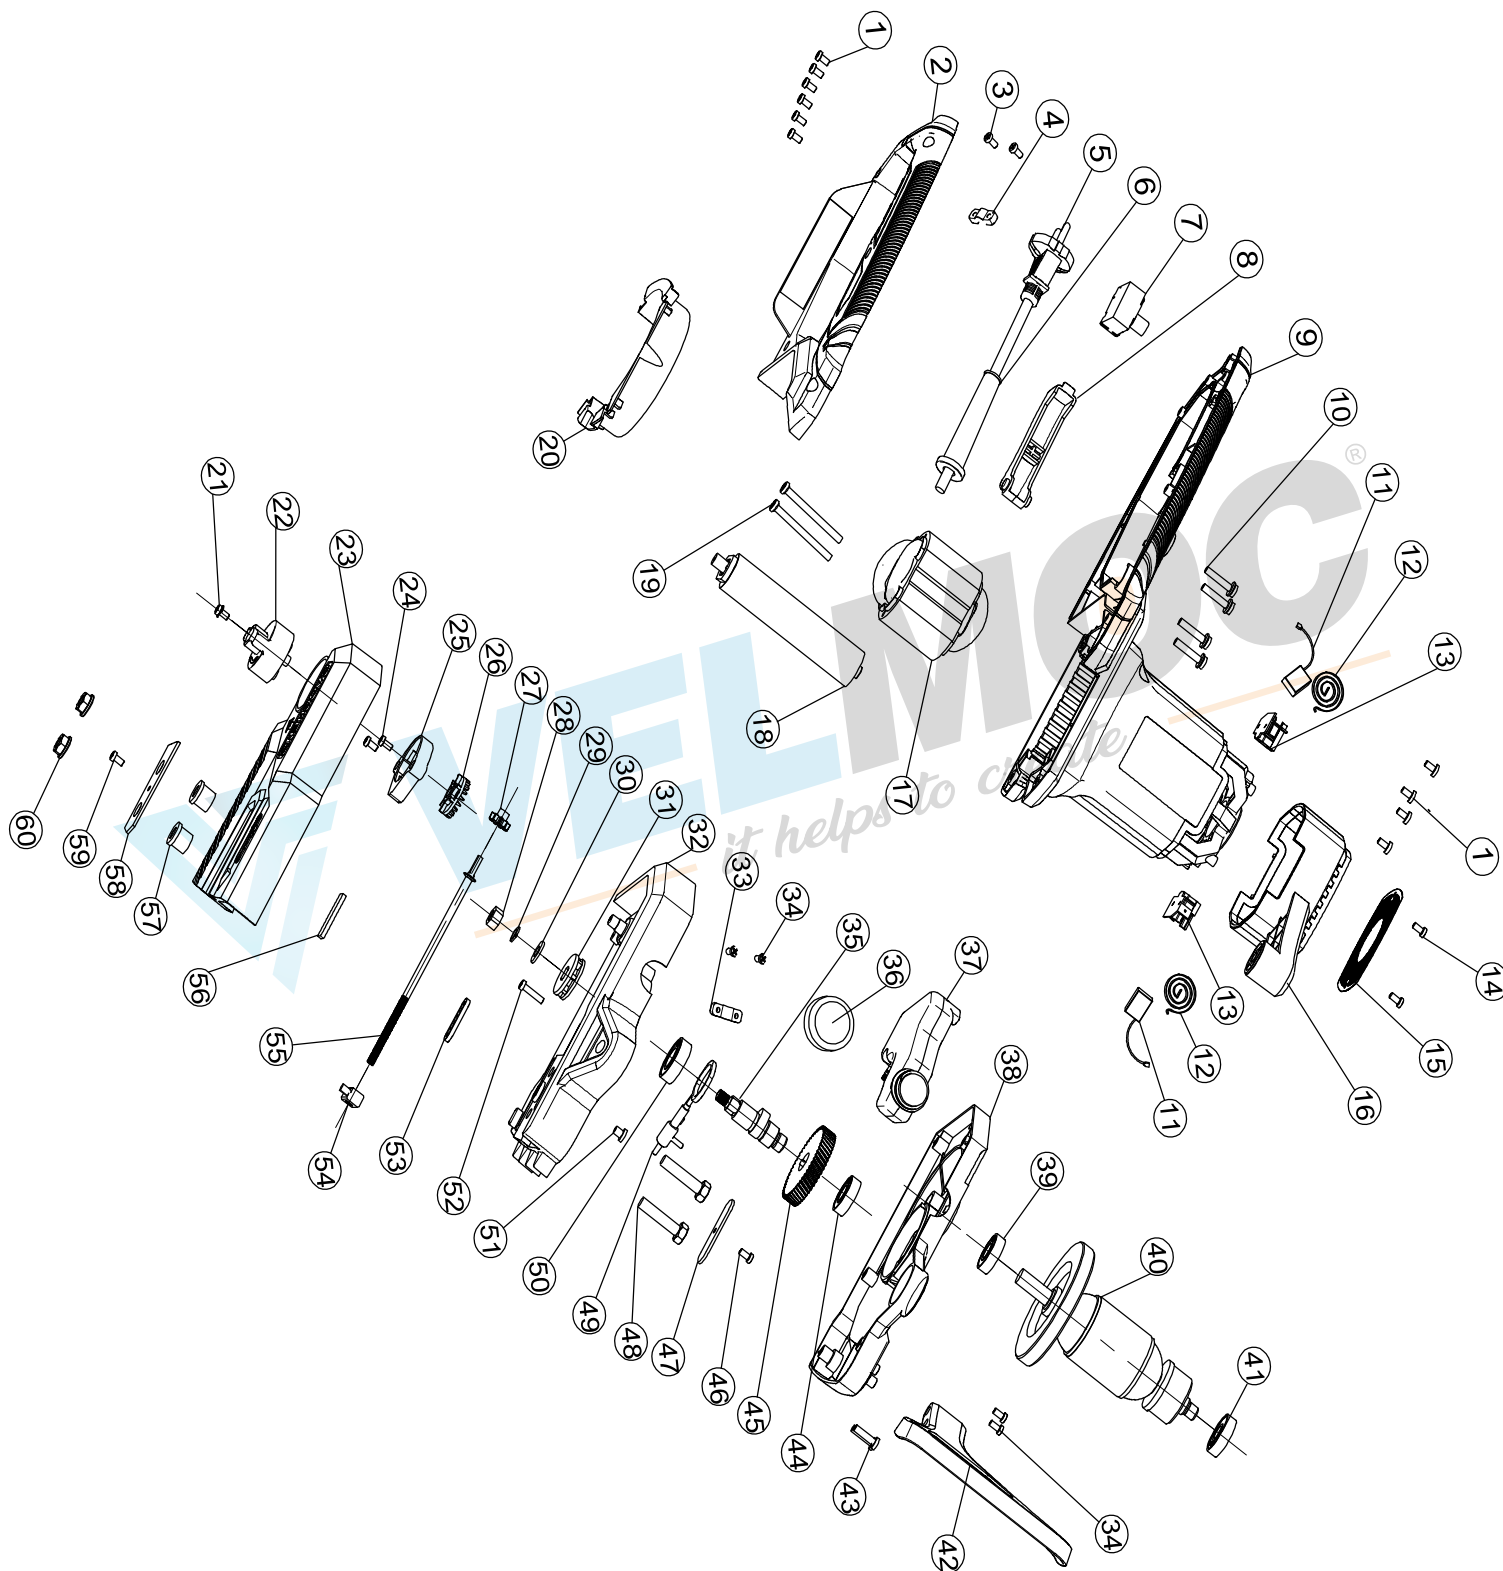



S. N.	Part Code	Parts Name
1	16195001	self-tapping screw
2	16195002	handle cover
3	16195003	self-tapping screws
4	16195004	cable crimping plate
5	16195005	cable
6	16195006	cable jacket
7	16195007	switch
8	16195008	switch trigger
9	16195009	chassis
10	16195010	triple set screws
11	16195011	carbon brush holder
12	16195012	coil spring
13	16195013	carbon brush holder
14	16195014	self tapping screws
15	16195015	ir Filter
16	16195016	rear cover
17	16195017	stator
18	16195018	attached handle
19	16195019	tapping screws
20	16195020	windshield
21	16195021	flange face screws
22	16195022	adjust the torque
23	16195023	guide cover
24	16195024	screws
25	16195025	adjust gear box cover
26	16195026	screw adjusting large teeth
27	16195027	screw adjusting teeth
28	16195028	nut
29	16195029	spring pad
30	16195030	flat pad
31	16195031	sprocket

S. N.	Part Code	Parts Name
32	16195032	front cover
33	16195033	oil pump pressure plate
34	16195034	screws
35	16195035	output axis
36	16195036	oil can cover
37	16195037	oil pot
38	16195038	middle cover
39	16195039	bearing
40	16195040	rotor
41	16195041	bearing
42	16195042	front gear
43	16195043	screws
44	16195044	bearing
45	16195045	big teeth
46	16195046	screws
47	16195047	screw press
48	16195048	outer hexagonal screws
49	16195049	oil pump
50	16195050	bearing
51	16195051	nozzle seal
52	16195052	self-tapping screws
53	16195053	ring type oil seal
54	16195054	adjusting nut
55	16195055	adjusting lead screw
56	16195056	square type oil seal
57	16195057	guide cover steel sleeve
58	16195058	guide cover anti-compression sheet
59	16195059	leveling machine self-tapping screws
60	16195060	flange nut